
Experiment 1: Resistors

Objectives of the Experiment

Getting to know the following components

- Digital multimeter
- Function generator
- Breadboard

Applying

- direct/indirect resistance measurement
- resistor standard series
- mesh/node equations
- differential resistance of an incandescent lamp

Resistance measurement

Procedure for resistance measurement:

1. Set the measuring device to resistance measurement.
2. Connect the resistor to be measured to the corresponding sockets on the measuring device (the sockets labelled COM and Ω).
3. Read the measured value.

There are different types of resistance measurement:

- **direct** resistance measurement
- **indirect** resistance measurement

Direct resistance measurement

Determine the nominal and measured values of the resistance for R_1 (brown, green, orange), R_2 (yellow, violet, red), R_3 (red, violet, red), and the incandescent lamp R_L . Also measure the approximate resistance R_K of your body from your right hand to your left hand.

	R_1	R_2	R_3	R_L	R_K
nominal value					
measured value					

Tab. 1: Direct resistance measurement

How do you explain the deviation between $R_{L,nominal}$ and $R_{L,meas}$?

What consequences can R_K have?

Now determine the series and parallel combinations of resistors R_1 , R_2 and R_3 .
State the formulae used:

$$R_{\text{series}} = R_a + R_b$$

$$R_{\text{parallel}} = R_a \parallel R_b = \frac{R_a \cdot R_b}{R_a + R_b}$$

	R1+R2	R1+R3	R2+R3	R1 R2	R1 R3	R2 R3
calculated						
measured						

Tab. 2: Series and parallel combinations

Indirect resistance measurement

Resistance can also be determined by measuring current and voltage.

Ohm's law: In an electrical circuit, the current increases with increasing voltage and decreases with increasing resistance.

$$I = \frac{U}{R}$$

Build the measurement circuit shown in figure 1 for each of the three resistors and set the voltage on the power supply to 12 V.

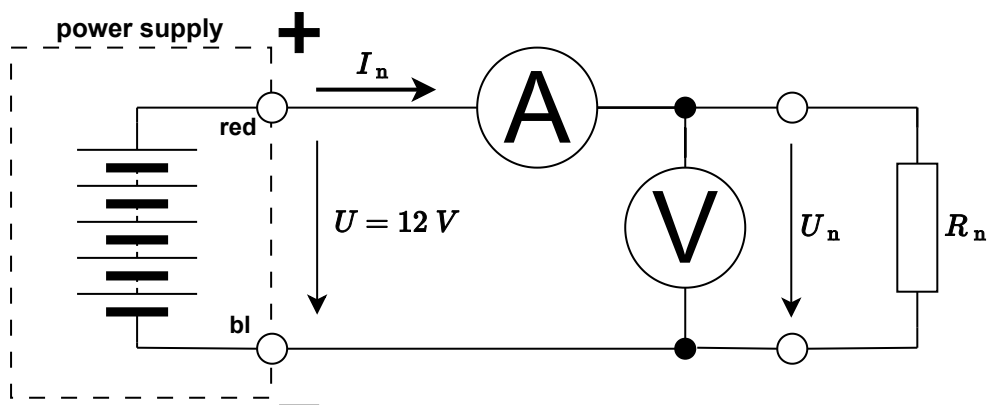


Fig. 1: Indirect resistance measurement

Measure U_n and I_n . Calculate R_n from these values.

I_1	U_1	R_1	I_2	U_2	R_2	I_3	U_3	R_3

Tab. 3: Indirect resistance measurement

Loop law

Kirchhoff's voltage law: In every closed loop of an electrical network, the sum of all voltages is zero.

Set the voltage on the power supply to 12 V and measure this voltage accurately using a multimeter. Build the measurement circuit shown in figure 2.

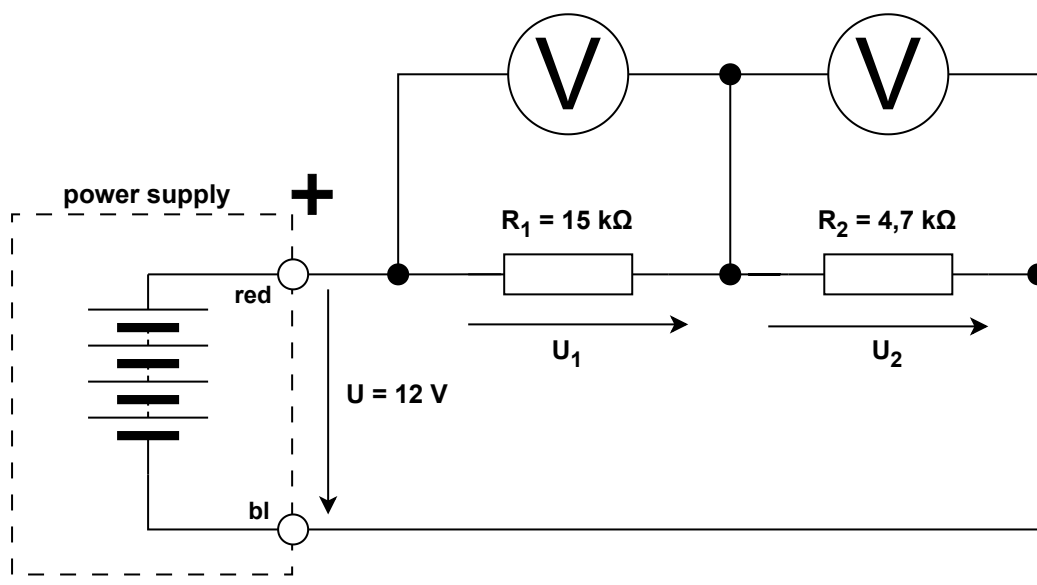


Fig. 2: Verification of Kirchhoff's voltage law

Add the voltage arrows and measure U , U_1 and U_2 .

U	U_1	U_2

Tab. 4: Voltage measurement for Kirchhoff's voltage law

What is the loop equation here?

Verify the equation using the measured values.

The resistors R_1 and R_2 connected in series form a voltage divider. In what ratio are the voltages U_1 and U_2 ?

$$\frac{U_1}{U_2} =$$

Node law

Kirchhoff's current law: At every node, the sum of all currents flowing into and out of the node is zero.

Set the voltage on the power supply to 12 V and measure the voltage accurately using a multimeter. As a first step, build the measurement circuit shown in figure 3.

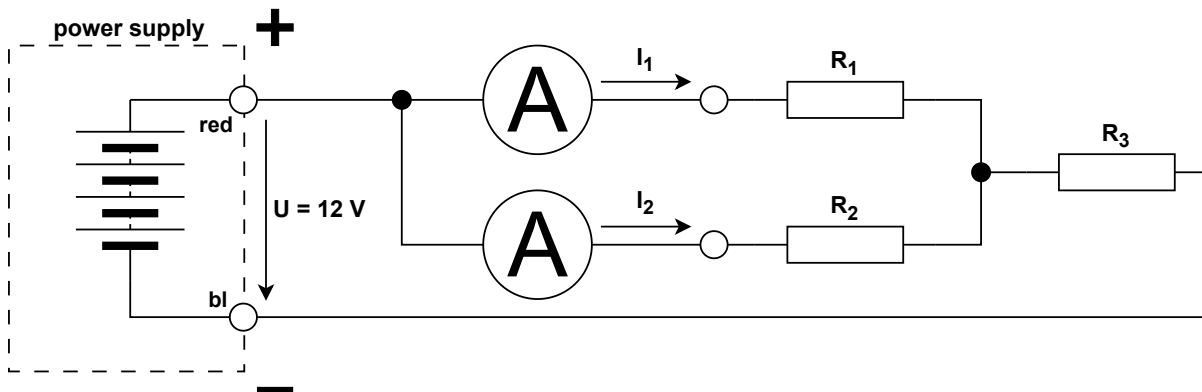


Fig. 3: Branch currents for verification of Kirchhoff's current law

Add the arrows indicating the directions of currents I_1 and I_2 . On both multimeters, set the DC () current range and the polarity before switching on. Then measure currents I_1 and I_2 and enter the measured values in the table.

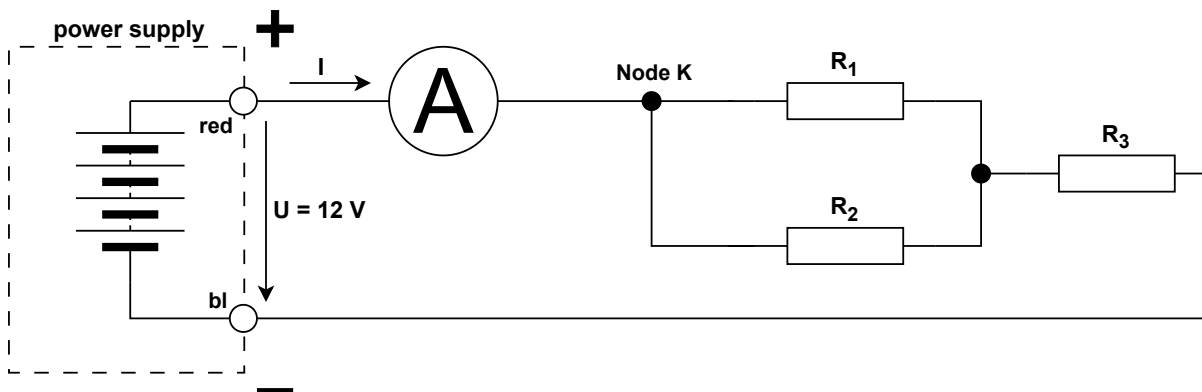


Fig. 4: Total current and node K

In what ratio are currents I_1 and I_2 ?

$$\frac{I_1}{I_2} =$$

Switch the power supply on again and measure the current I . Enter its value in the table.

I	I_1	I_2

Tab. 5: Current measurement for Kirchhoff's current law

Determine the node equation for node K and verify its validity.

Using the measured values of resistors R_1 , R_2 and R_3 , calculate the total resistance R_{KP} .

Using the calculated value of R_{KP} , verify the measured value of the total current:

$$I = \frac{U}{R_{KP}} =$$

Voltage divider as voltage source

The voltage divider shown in figure 5 is initially in the unloaded condition, because the entire current supplied by the power supply flows through the series-connected resistors R_1 and R_2 . A resistor connected in parallel with R_2 loads the voltage divider.

Set the voltage on the power supply to 12 V and measure the exact voltage with a multimeter.

For the connected load $R_L = 10 \text{ k}\Omega$, the voltage divider represents a voltage source. Like any voltage source, it has a source voltage U_0 and an internal resistance R_i .

The internal resistance of the voltage divider, considered as a voltage source, results from the parallel combination of the divider resistors R_1 and R_2 :

$$R_i = R_1 \parallel R_2 = \frac{R_1 \cdot R_2}{R_1 + R_2}$$

Use the measured values of resistors R_1 and R_2 to calculate the internal resistance R_i of the voltage source and determine the source voltage:

$$R_i =$$

$$U_0 =$$

The power P_0 supplied by the power supply can be calculated using:

$$P_0 = U \cdot I_1$$

The power consumed by the load resistor can be determined using:

$$P_L = R_L \cdot I_2^2$$

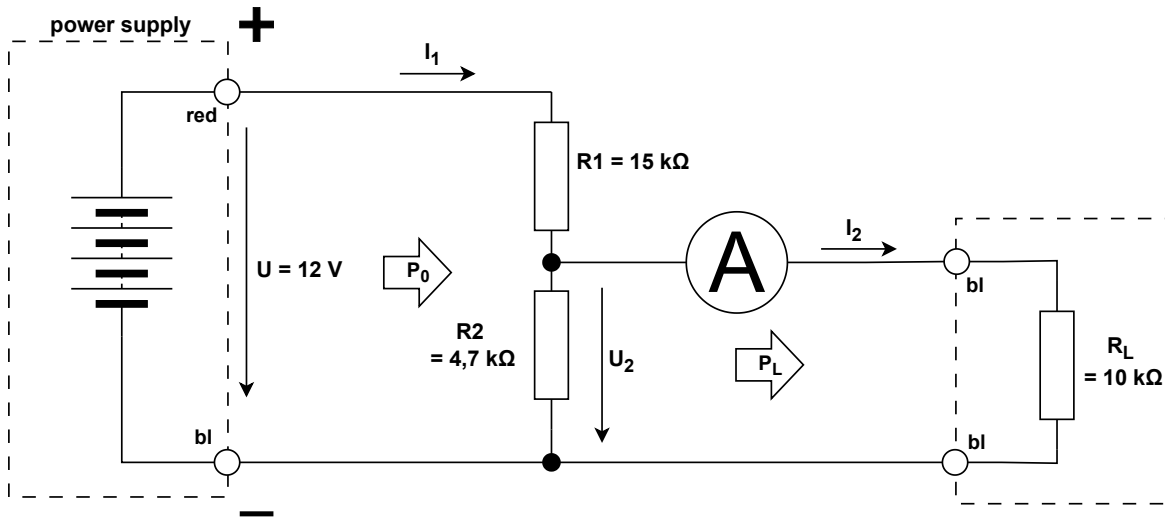


Fig. 5: Loaded voltage divider

Draw the equivalent voltage source of the voltage divider.

What value would U_2 have without R_L ?

$$U_{2,0} =$$

Calculate U_{2L} and I_2 for $R_L = 10 \text{ k}\Omega$ using the values of the equivalent voltage source. State the formulae used.

$$U_{2L} :$$

$$I_2 :$$

Verify the values by measurement.

$$U_{2L,\text{meas}} :$$

$$I_{2,\text{meas}} :$$

Verify the values using Kirchhoff's laws. State the formulae used.

$$U_{2L} :$$

I_2 :

Non-linear resistors

All resistors examined so far are linear resistors, for which the characteristic $I = f(U)$ is a straight line; see figure 6. The resistance of a linear resistor is independent of the current I flowing through it and of the applied voltage U .

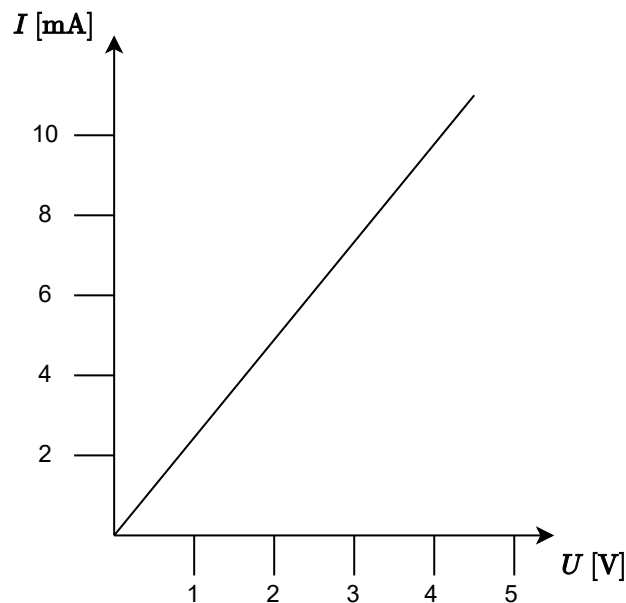


Fig. 6: Characteristic of a linear resistor

For non-linear resistors, there is no proportionality between current and voltage. The characteristic of such a resistor is shown in figure 7. For these resistors, one distinguishes between static resistance R and dynamic (or differential) resistance r .

The static resistance is determined for a specific operating point: at a given voltage, the current is read from the characteristic. The calculation is carried out according to Ohm's law:

$$R = \frac{U}{I}$$

The dynamic resistance around the operating point is calculated from the current difference caused by a change in the applied voltage:

$$r = \frac{\Delta U}{\Delta I}$$

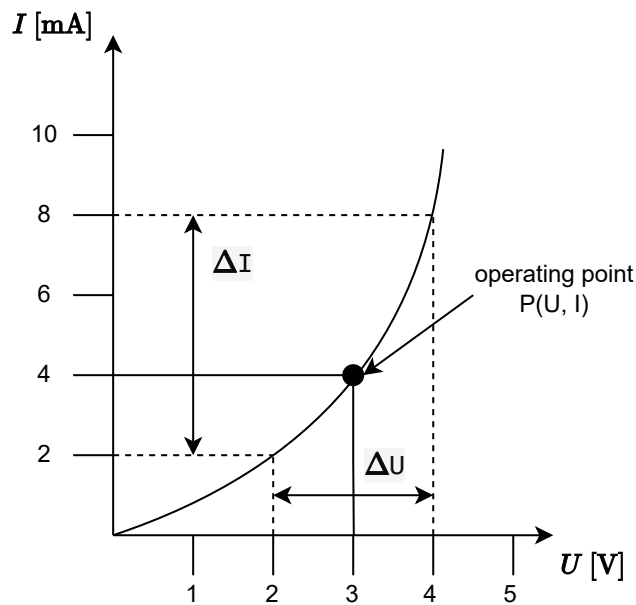


Fig. 7: Characteristic of a non-linear resistor

An incandescent lamp is investigated as an example of a non-linear resistor. Build the measurement circuit shown in figure 8.

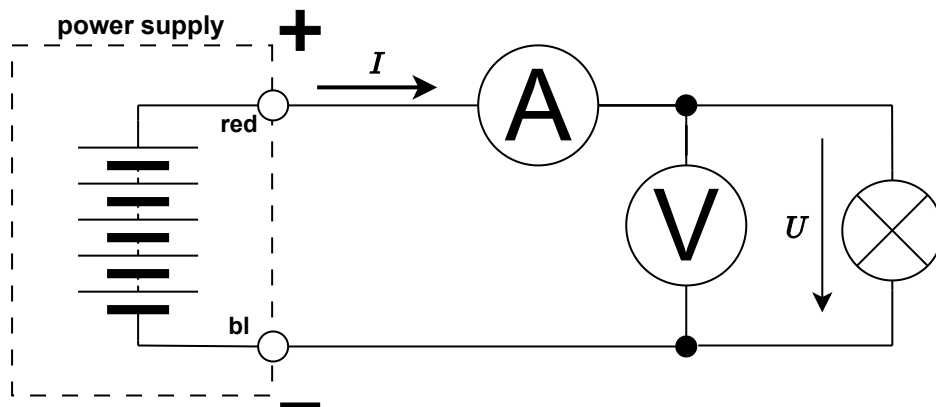


Fig. 8: Measurement circuit for incandescent lamp

Set the voltage on the power supply to the voltage values from table 6. Measure the corresponding current values and enter them in table 6.

U [V]	0,5	1,0	2,0	3,0	4,0	5,0	6,0	7,0	8,0
I [mA]									

Tab. 6: Measured values for the incandescent-lamp characteristic

Plot the characteristic $I = f(U)$.

Calculate the static resistance R at the operating point $U = 7.0 \text{ V}$.

Calculate the dynamic resistance r at the operating point $U = 7.0 \text{ V}$.

Compare the values with those from the direct resistance measurement (table 1).

Preparation for the oral short test

For this experiment you should

1. be able to apply and explain the following concepts:
 - a. current- and voltage-correct measurement
 - b. series and parallel connection of resistors
 - c. mesh and node equations (Kirchhoff's laws)
 - d. passive sign convention and active sign convention
 - e. ideal and real sources

You should be able to answer the following questions:

1. Which operating mode does the source use? Which quantity is kept constant by the source?
2. Power supplies operate in quadrants. In which quadrant is the power supply operated? What can the source then correspondingly not do?
3. What must be considered for the (loaded and unloaded) voltage divider?
4. How do you measure a voltage with a current meter? How a current with a voltage meter?
5. How does an ohmmeter measure resistance?
6. Where are the limits of linearity in real resistors?
7. What examples are there of linear and non-linear resistors?
8. What else can the resistance depend on?



Except where otherwise noted, content on this wiki is licensed under the following license:
CC Attribution-Share Alike 4.0 International